

Always there to help you

Register your product and get support at  
www.philips.com/welcome



HD3158  
Мультиварка  
Мультипісирш



EN User manual RU Руководство пользователя

PHILIPS



Specifications are subject to change without notice  
© 2014 Koninklijke Philips N.V.  
All rights reserved.



## English

### 1 Your multicooker

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

### 2 What's in the box (fig.1)

Multicooker main unit	Measuring cup
Power cord	Steam rack
User manual	Recipe
Safety leaflet	Warranty card

### 3 Overview (fig.2)



① Detachable steam vent cap	⑦ Heating element
② Lid release button	⑧ Power socket
③ Top lid	⑨ Cooker handle
④ Inner pot	⑩ Water level indications
⑤ Control panel	⑪ Sealing ring
⑥ Main body	

### Controls overview (fig.3)

⑫ Cooking functions	⑰ Decrease button
⑬ Keep-warm button	⑱ Temperature button
⑭ Menu button	⑲ Preset button
⑯ Cooking time button	⑳ Start/Cancel button
⑰ Increase button	㉑ Display screen

### Functions overview

Functions	Default cooking time	Adjustable cooking time	Preset time	Default cooking temperature
Rice/Grains (рис/крупы)	40 min	/	1-24 hr	130-140°C
Porridge (каша)	10 min	5 min - 2 hr	1-24 hr	90-100°C
Plov (плов)	35 min	/	1-24 hr	130-140°C
Yogurt (йогурт)	8 hr	6-12 hr	1-24 hr	40±3°C
Soup (суп)	1 hr	20 min-4 hr	1-24 hr	100°C
Drinks (напитки)	10 min	5-40 min	1-24 hr	100°C
Jelly meat (желе)	6 hr	4-10 hr	1-24 hr	90-100°C
Bake (печь)	45 min	20 min - 2 hr	/	130°C
Reheat (разогреть)	25 min	5-60 min	/	85°C

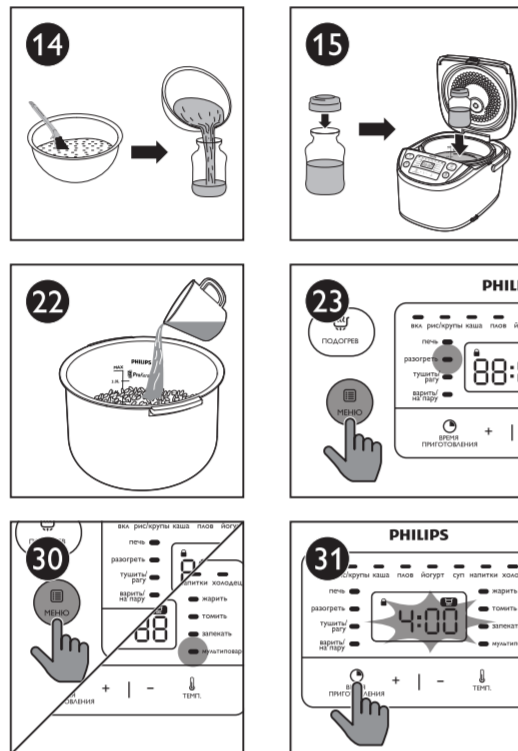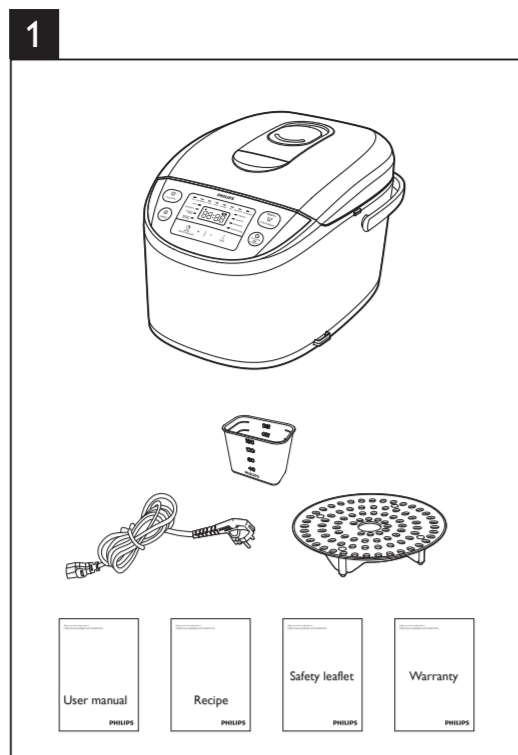

Functions	Default cooking time	Adjustable cooking time	Preset time	Default cooking temperature
Stew/Ragout (тушить/рагу)	1 hr	20 min - 10 hr	1-24 hr	90°C
Steam/Boil (варить/на пару)	20 min	5 min - 2 hr	1-24 hr	100°C
Гу (жарить)	15 min	5-60 min	/	145-150°C
Slow cook (томить)	5 hr	1-15 hr	1-24 hr	80°C
Roast (Запекать)	1 hr	/	1-24 hr	130°C
Manual (мультивар)	2 hr	5 min - 10 hr	1-24 hr	100°C

**Note**

- The cooking temperature for the baking and manual functions is adjustable. You can select temperature for the baking function between 40°C to 160°C, and select temperature for the manual function between 30°C to 160°C. The step is 10°C.
- After the cooking has started, you can press and hold the Start/Cancel button (СТАРТ/ВЫКА) for 3 seconds to deactivate the cooking process and the multicooker will enter the standby mode.

### 4 Using the multicooker

#### Before first use

- Take out all the accessories from the inner pot. Remove the packaging material of the inner pot.
- Clean the parts of the multicooker thoroughly before using it for the first time (see chapter "Cleaning and Maintenance").



**Note**

- Make sure all parts are completely dry before you start using the multicooker.

#### Preparations before cooking

Before using the multicooker, you need to do the following steps:

- Measure the grains using the measuring cup provided.
- Wash the grains thoroughly.
- Put the pre-washed grains in the inner pot.
- Add water to the level indicated on the scale inside the inner pot and smooth the grains surface.
- Press the lid release button to open the lid (fig.4).
- Wipe the outside of the inner pot dry (fig.5), then put the inner pot in the multicooker (fig.6). Check if the inner pot is in proper contact with the heating element.
- Close the lid of the multicooker (fig.7), and put the plug in the power socket (fig.8).

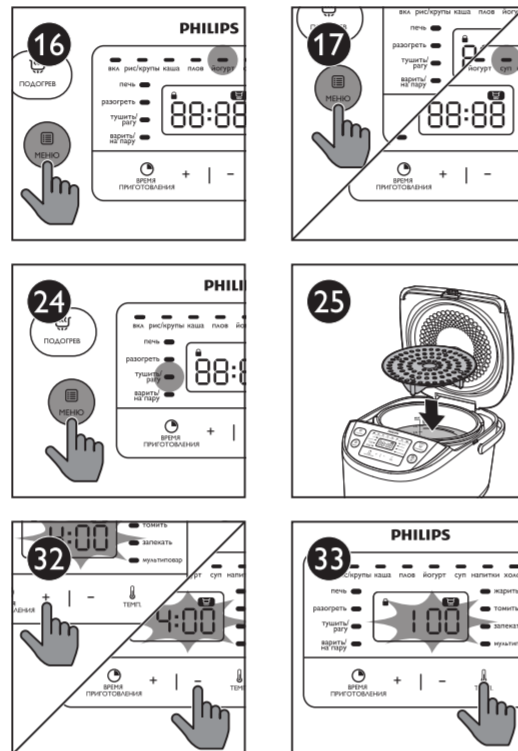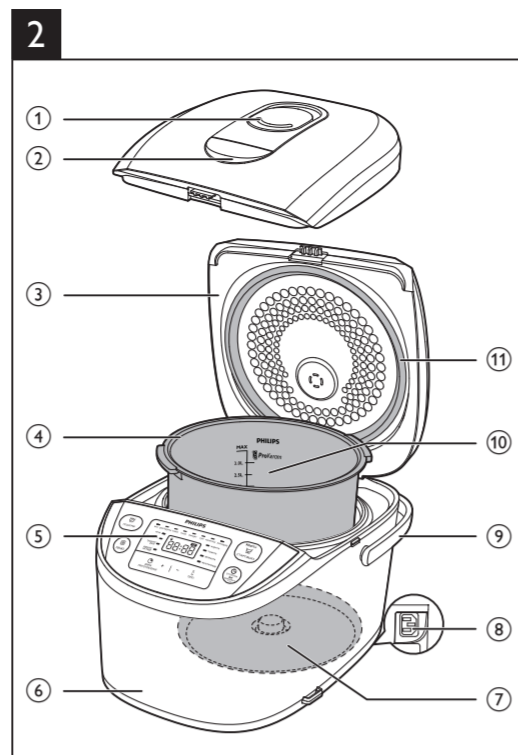

**Note**

- Make sure that the inner pot is proper contact with the heating element.
- For details about the ratio of grains and water, see the recipe.
- The level marked inside the inner pot is just an indication. You can always adjust the water level for different types of grains and your own preference.
- Make sure that the outside of the inner pot is clean and dry, and that there is no foreign residue on the heating element or the magnetic switch.

#### Cooking rice/grains

- Follow the steps in "Preparations before cooking".
- Press the menu button (МЕНЮ) until the rice/grains cooking function (рис/крупы) is selected (fig.9).
- Press and hold the start button (СТАРТ/ВЫКА) for 3 seconds to start cooking (fig.10).
- When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
- The multicooker will be in keep-warm mode automatically. The keep-warm indicator (ПОДОГРЕВ) lights up (fig.11).

**Note**

- If the voltage is unstable at the area you live, it is possible that the multicooker overflows.
- After the cooking is finished, stir the rice and loosen it immediately to release excessive moisture for fluffy rice.
- Depending on the cooking conditions, the bottom portion of the rice may become slightly browned.

#### Cooking porridge

- Follow steps 1 to 7 in "Preparations before cooking".
- Press the menu button (МЕНЮ) until the porridge function (каша) is selected (fig.12).
- To set a different cooking time, refer to chapter "Adjusting the cooking time and temperature".
- Press the start button (СТАРТ/ВЫКА) for 3 seconds to start cooking (fig.10).
- When the cooking is finished, you will hear a few beeps and the selected cooking function light will be off.
- The multicooker will be in keep-warm mode automatically. The keep-warm indicator (ПОДОГРЕВ) lights up (fig.11).



**Tip**

- Besides following the water level indications, you may also add rice and water at 1:4 ratio for porridge cooking.

- Put the food and ingredients into the inner pot.
- Follow steps 6 and 7 in "Preparations before cooking".
- Press the menu button (МЕНЮ) until the drinks function (напиток) is selected (fig.18).
- To set a different cooking time, refer to chapter "Adjusting the cooking time and temperature".
- Press the start button (СТАРТ/ВЫКА) for 3 seconds to start cooking (fig.10).
- When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
- The multicooker will be in keep-warm mode automatically. The keep-warm indicator (ПОДОГРЕВ) lights up (fig.11).

#### Making plov

- Put the food and ingredients into the inner pot.
- Follow steps 6 and 7 in "Preparations before cooking".

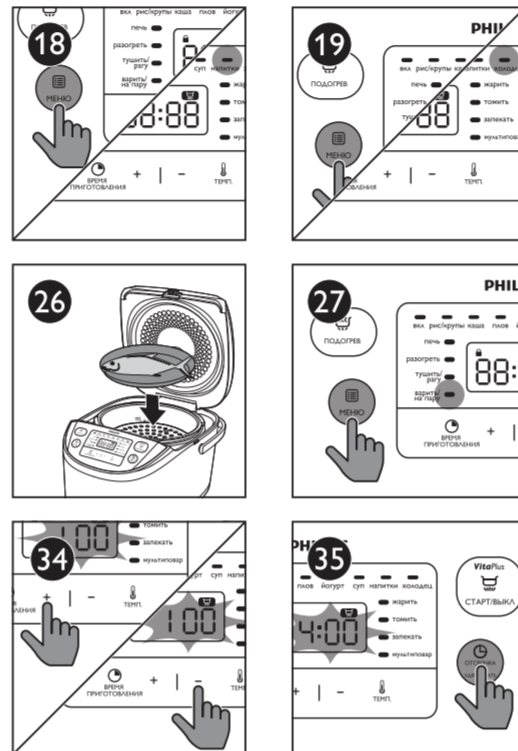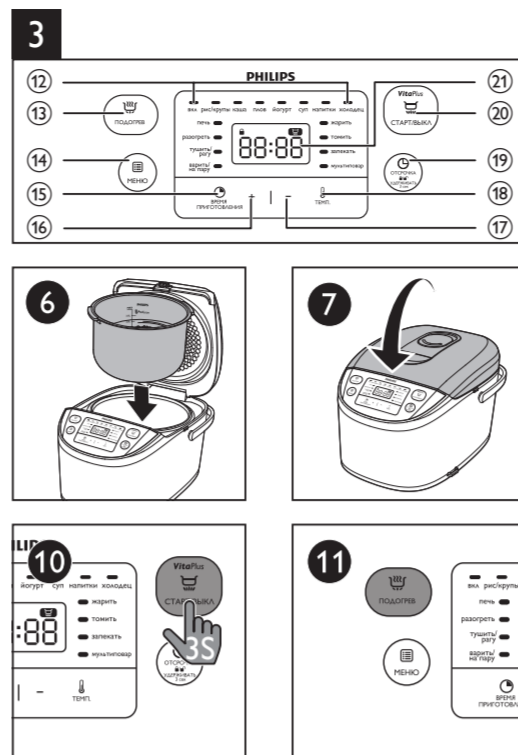

- Press the menu button (МЕНЮ) until the plov function (плов) is selected (fig.13).
- Press and hold the start button (СТАРТ/ВЫКА) for 3 seconds to start cooking (fig.10).
- When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
- The multicooker will be in keep-warm mode automatically. The keep-warm indicator (ПОДОГРЕВ) lights up (fig.11).

#### Making yogurt



- Whisk the ingredients for the yogurt well and put them in a glass container (fig.14).
- Put the glass container in the inner pot (fig.15). Make sure that the container is sealed.
- Pour some water in the inner pot. Make sure that half of the container is immersed in water.
- Follow steps 6 and 7 in "Preparations before cooking".
- Press the menu button (МЕНЮ) until the yogurt function (йогурт) is selected (fig.16).
- To set a different cooking time, refer to chapter "Adjusting the cooking time and temperature".
- Press and hold the start button (СТАРТ/ВЫКА) for 3 seconds to start cooking (fig.10).
- When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
- The multicooker will enter the standby mode automatically.

#### Making soup

- Put ingredients and water into the inner pot.
- Follow steps 6 and 7 in "Preparations before cooking".
- Press the menu button (МЕНЮ) until the soup function (суп) is selected (fig.17).
- To set a different cooking time, refer to chapter "Adjusting the cooking time and temperature".
- Press the start button (СТАРТ/ВЫКА) for 3 seconds to start cooking (fig.10).
- When the cooking is finished, you will hear a few beeps and the selected cooking function light will be off.
- The multicooker will be in keep-warm mode automatically. The keep-warm indicator (ПОДОГРЕВ) lights up (fig.11).

#### Making drinks

- Put ingredients and water into the inner pot.
- Follow steps 6 and 7 in "Preparations before cooking".
- Press the menu button (МЕНЮ) until the drinks function (напиток) is selected (fig.18).
- To set a different cooking time, refer to chapter "Adjusting the cooking time and temperature".
- Press the start button (СТАРТ/ВЫКА) for 3 seconds to start cooking (fig.10).
- When the cooking is finished, you will hear a few beeps and the selected cooking function light will be off.
- The multicooker will be in keep-warm mode automatically. The keep-warm indicator (ПОДОГРЕВ) lights up (fig.11).

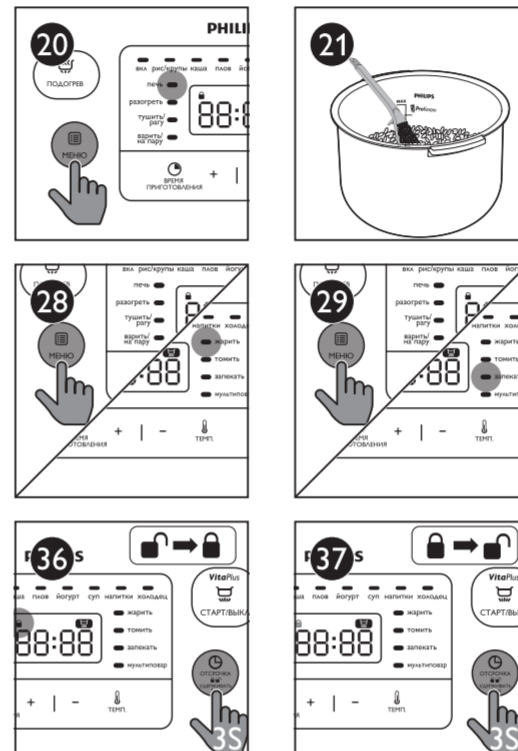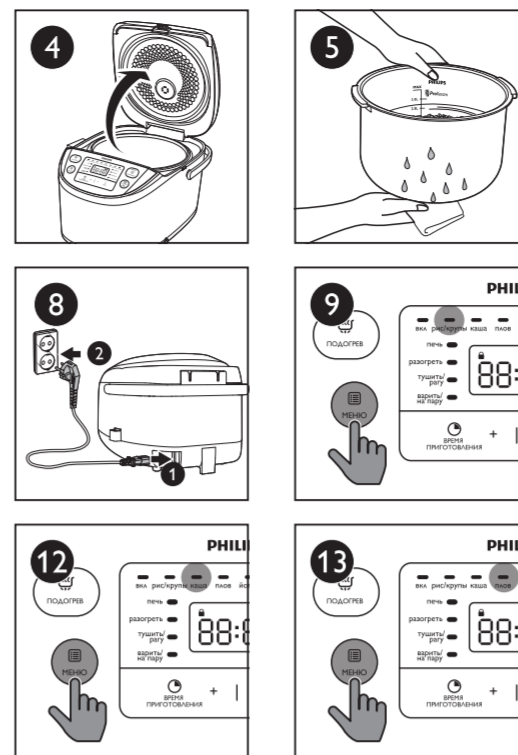

#### Cooking jelly meat/slow cooking

- Put the food and ingredients in the inner pot.
- Follow steps 6 and 7 in "Preparations before cooking".
- Press the menu button (МЕНЮ) until the jelly meat cooking function (желе) or the slow cooking function (томить) is selected (fig.19).
- To set a different cooking time, refer to chapter "Adjusting the cooking time and temperature".
- Press and hold the start button (СТАРТ/ВЫКА) for 3 seconds to start cooking (fig.10).
- When the cooking is finished, you will hear a few beeps and the selected cooking function light will be off.
- The multicooker will be in keep-warm mode automatically. The keep-warm indicator (ПОДОГРЕВ) lights up (fig.11).

#### Baking

- Put the food and ingredients in the inner pot.
  - Follow step 6 in "Preparations before cooking".
  - Put the plug in the power socket.
- Note**
- When baking cake, keep the lid closed during cooking. Baking cake at 130°C and by 45 minutes usually delivers best cooking result.
  - It's recommended to open lid during cooking when the temperature is above 130°C.



- Press the menu button (МЕНЮ) until the baking function (печь) is selected (fig.20).
- To set a different cooking time and temperature, refer to chapter "Adjusting the cooking time and temperature".
- Press and hold the start button (СТАРТ/ВЫКА) for 3 seconds to start cooking (fig.10).
- When the baking is finished, you will hear 4 beeps and the selected function light will be off.
- The multicooker will be in keep-warm mode automatically. The keep-warm indicator (ПОДОГРЕВ) lights up (fig.11).

**Note**

- When removing the inner pot from the multicooker, use a kitchen glove or a cloth, as the inner pot will be very hot.

#### Reheating

- Loosen the cooled food and evenly distribute it in the inner pot (fig.21).
- Pour some water onto the food to prevent it from becoming too dry (fig.22). The quantity of the water depends on the amount of food.
- Follow steps 6 and 7 in "Preparations before cooking".
- Press the menu button (МЕНЮ) until the reheating function (разогреть) is selected (fig.23).
- To set a different cooking time, refer to chapter "Adjusting the cooking time and temperature".

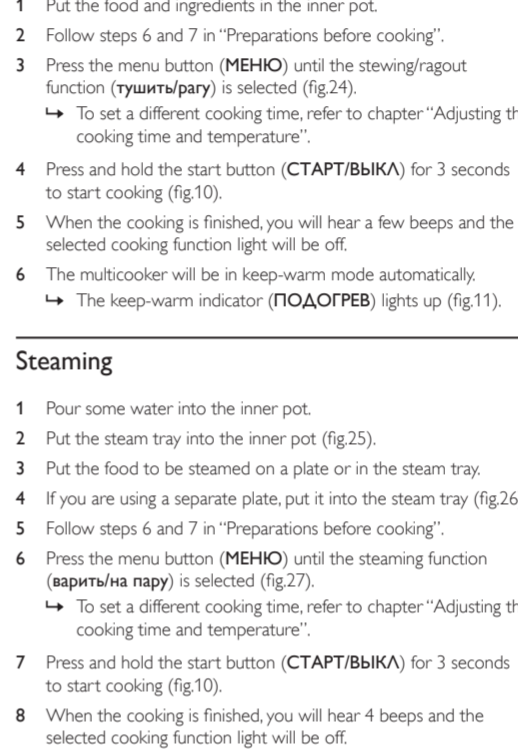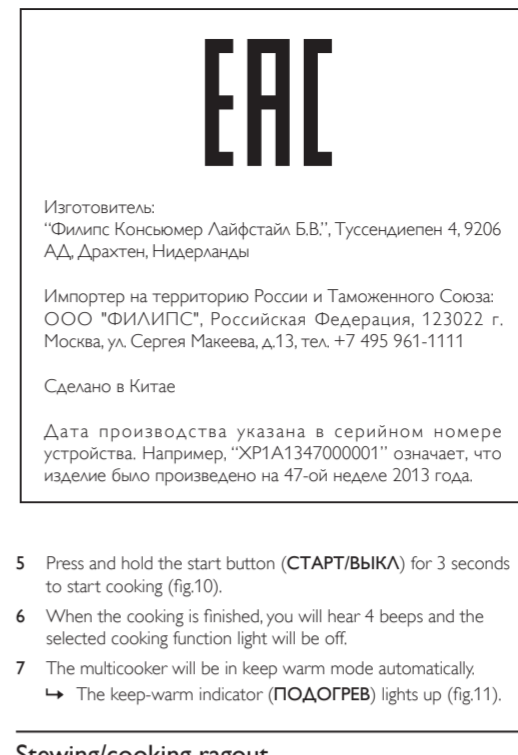

- Press and hold the start button (СТАРТ/ВЫКА) for 3 seconds to start cooking (fig.10).
- When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
- The multicooker will be in keep-warm mode automatically. The keep-warm indicator (ПОДОГРЕВ) lights up (fig.11).

**Note**

- The quantity of water depends on the amount of food in the steam tray. Do not immerse the steam tray in water.
- Use a kitchen glove or a cloth, as the plate and steam tray will be very hot.

#### Boiling

- Put the food and ingredients in the inner pot.
- Follow steps 6 and 7 in "Preparations before cooking".
- Press the menu button (МЕНЮ) until the boiling function (варить/на пару) is selected (fig.27).
- To set a different cooking time, refer to chapter "Adjusting the cooking time and temperature".
- Press the start button (СТАРТ/ВЫКА) to start cooking (fig.10).
- When the cooking is finished, you will hear a few beeps and the selected cooking function light will be off.
- The multicooker will be in keep-warm mode automatically. The keep-warm indicator (ПОДОГРЕВ) lights up (fig.11).

#### Frying


- Put food and ingredients into the inner pot.
- Follow step 6 in "Preparations before cooking".
- Put the plug in the power socket.
- Press the menu button (МЕНЮ) until the frying function (жарить) is selected (fig.28).
- To set a different cooking time, refer to chapter "Adjusting the cooking time and temperature".
- Press and hold the start button (СТАРТ/ВЫКА) for 3 seconds to start cooking (fig.10).
- When the cooking is finished, you will hear 4 beeps and the selected cooking function light will be off.
- The multicooker will be in keep-warm mode automatically. The keep-warm indicator (ПОДОГРЕВ) lights up (fig.11).

**Note**

- Do not close the top lid when cooking in the fry mode (жарить).

#### Roasting

- Put food and ingredients into the inner pot.
- Follow step 6 in "Preparations before cooking".
- Put the plug in the power socket.
- Press the menu button (МЕНЮ) until the roasting function (запекать) is selected (fig.29).
- To set a different cooking time, refer to chapter "Adjusting the cooking time and temperature".
- Press and hold the start button (СТАРТ/ВЫКА) for 3 seconds to start cooking (fig.10).

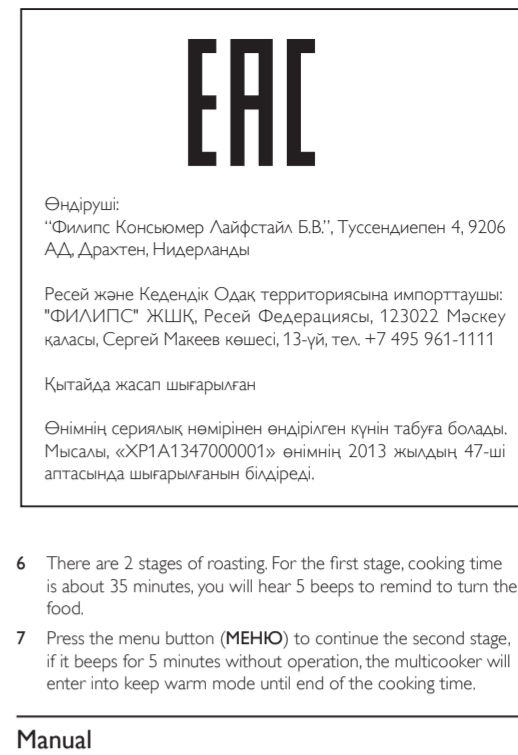

- There are 2 stages of roasting. For the first stage, cooking time is about 35 minutes, you will hear 5 beeps to remind to turn the food.
- Press the menu button (МЕНЮ) to continue the second stage, if it beeps for 5 minutes without operation, the multicooker will enter into keep-warm mode until end of the cooking time.

**Note**

- If you cook food at a temperature below 70°C, please turn off the keep-warm mode before start cooking.
- In manual (мультивар) mode, when cooking at a temperature higher than 130°C, the top lid must be opened during cooking.

#### Keep-warm mode

The multicooker provides you with easy control over the keep-warm mode.

- After you have selected the cooking function using the menu button (МЕНЮ), if you press the start button (СТАРТ/ВЫКА) for 3 seconds directly, the keep-warm indicator will light up. After the cooking is finished, the multicooker will switch to keep-warm mode directly.
- After you have selected the cooking function using the menu button (МЕНЮ), if you press the keep-warm button first, and then the start button (СТАРТ/ВЫКА) for 3 seconds, the keep-warm indicator will be off. After the cooking is finished, the multicooker will be in standby mode.

**Note**

- In standby mode, you can press the keep-warm button (ПОДОГРЕВ) to enter keep-warm mode.
- In keep-warm mode, you can press the keep-warm button (ПОДОГРЕВ) to enter standby mode.

#### Adjusting the cooking time and temperature

You can adjust the cooking time for all functions except the rice/grains, roast, and plov functions; and you can adjust the cooking temperature for baking and manual functions. Refer to the "Functions overview" table for the time and temperature regulation of each function.

- After you have selected the desired cooking function using the menu button, the default cooking time will be displayed on the screen.
- To set a different cooking time, press the cooking time button (ВРЕМЯ/ПОДГОТОВЛЕНИЕ) (fig.31), and the default cooking time starts flashing on the display.
  - Press the increase (+) or the decrease (-) button to set the hour unit (fig.32).
  - After the hour unit is set, wait for a few seconds before the hour unit is confirmed, and the minute unit starts flashing on the display.
  - Press the increase (+) or the decrease (-) button to set the minute unit.
  - To set a different cooking temperature, press the temperature button (ТЕМП.) (fig.33), and the default temperature starts flashing on the display.
  - Press the increase (+) or the decrease (-) button to set the desired cooking temperature (fig.34).

#### Preset time for delayed cooking

You can preset the delayed cooking time for all cooking modes except the reheating, baking, and frying modes.

- Follow steps 6 and 7 in "Preparations before cooking".
- Press the menu button (МЕНЮ) until your preferred cooking function is selected.
- Press the preset time button (ОТСРОЧКА), and the default preset time starts flashing on the display (fig.35).
- Press the increase button (+) and the decrease button (-) to set the desired preset time.
- Press the start button (СТАРТ/ВЫКА) for 3 seconds to confirm the preset timer (fig.10).
- The cooking will be finished when the preset time has elapsed. You will hear 4 beeps and the selected cooking function light will be off.
- The multicooker will be in keep-warm mode automatically.
- The keep-warm indicator (ПОДОГРЕВ) lights up (fig.11).

**Note**

- The preset function is not available in bake (печь), fry (жарить), and reheat (разогреть) mode.
- The preset button is not responsive in standby mode.



## Setting up child lock

To protect your child from using the multicooker, you may set up the child lock function.

- Press and hold the preset button (**ОТСРОЧКА**) for 3 seconds to enter the child lock mode (fig.36).
  - ↪ The child lock icon lights up on the display.
- To unlock, press and hold the preset button (**ОТСРОЧКА**) for 3 seconds again.
  - ↪ The child lock icon lights off (fig.37).

## 5 Cleaning and Maintenance

<b>≡</b> Note
<ul style="list-style-type: none"><li>Unplug the multicooker before starting to clean it.</li> <li>Wait until the multicooker has cooled down sufficiently before cleaning it.</li></ul>

### Interior

Inside of the top lid and the main body:

- Wipe with wrung out and damp cloth.
- Make sure to remove all the food residues stuck to the multicooker.

Heating element:

- Wipe with wrung out and damp cloth.
- Remove food residues with wrung out and damp cloth.

### Exterior

Surface of the top lid and outside of the main body:

- Wipe with a cloth damped with soap water.
- Only use soft and dry cloth to wipe the control panel.
- Make sure to remove all the food residues around the control panel.

### Accessories

Inner pot, steam rack, and steam vent cap:

- Soak in hot water and clean with sponge.

## 6 Environment

Do not throw away the appliance with normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you can help to preserve the environment.



## 7 Guarantee and service

If you need service or information, or if you have a problem, visit the Philips website at www.philips.com or contact the Philips Customer Care Center in your country.You can find its phone number in the worldwide guarantee leaflet. If there is no Customer Care Center in your country,go to your local Philips dealer.

## 8 Specifications

Model Number	HD3158
Rated power output	980W
Rated capacity	5.0L

## 9 Troubleshooting

If you encounter problems when using this multicooker, check the following points before requesting service. If you cannot solve the problem, contact the Philips Consumer Care Center in your country.

Problem	Solution
The light on the button does not go on.	There is a connection problem. Check if the power cord is connected to the multicooker properly and if the plug is inserted firmly into the power outlet. <p>The light is defective. Take the appliance to your Philips dealer or a service center authorized by Philips.</p>
The display does not function.	The multicooker is not connected to the power supply. If there is no power supply, the power failure backup function does not work and the display does not function. <p>The battery for the display runs out of power. Take the appliance to your Philips dealer or a service center authorized by Philips to have the battery recharged.</p>
The rice is not cooked.	There is not enough water. Add water according to the scale on the inside of the inner pot. <p>You did not press the start button (<b>СТАРТ/ВЫКЛ</b>). <p>Make sure that there is no foreign residue on the heating element and the outside of the inner pot before switching the multicooker on.</p> <p>The heating element is damaged, or the inner pot is deformed. Take the multicooker to your Philips dealer or a service center authorized by Philips.</p></p>
The rice is too dry and not well cooked.	Add more water to the rice, and cook for a bit longer.
The multicooker does not switch to the keep-warm mode automatically.	You might have pressed the keep-warm button ( <b>ПОДОГРЕВ</b> ) before pressing the start button ( <b>СТАРТ/ВЫКЛ</b> ). In this case the multicooker will be in standby mode after the cooking is finished. <p>The temperature control is defective. Take the appliance to your Philips dealer or a service center authorized by Philips.</p>
The rice is scorched.	You have not rinse the rice properly. Rinse the rice until the water runs clear.
Water spills out of the multicooker during cooking.	Make sure that you add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used.
I cannot get to the desired cooking function.	Press the menu button ( <b>МЕНЮ</b> ) repeatedly to select the desired function as shown by the indicator.
Rice smells bad after cooking	Clean the inner pot with some washing detergent and warm water. <p>After cooking, make sure the steam vent cap, inner lid and inner pot is cleaned thoroughly.</p>
Error message (E1, E2, E3, or E4) appears on the display.	There has been a power failure during cooking. Take the appliance to your Philips dealer or a service center authorized by Philips.

## Русский

## 1 Мультиварка

Поздравляем с покупкой и приветствуем вас в клубе Philips!
Чтобы воспользоваться всеми преимуществами поддержки Philips, зарегистрируйте устройство на веб-сайте www.philips.com/welcome.

## 2 Комплект поставки (рис. 1)

Мультиварка (основное устройство)	Мерная чашка
Шнур питания	Корзина для приготовления на пару
Руководство пользователя	Книга рецептов
Инструкции по безопасности	Гарантийный талон

## 3 Описание прибора (рис. 2)

<b>1</b>	Съемная крышка отверстия выхода пара	<b>7</b>	Нагревательный элемент
<b>2</b>	Кнопка открывания крышки	<b>8</b>	Разъем набора питания
<b>3</b>	Верхняя крышка	<b>9</b>	Ручка мультиварки
<b>4</b>	Внутренняя чаша	<b>10</b>	Индикация уровня воды
<b>5</b>	Панель управления	<b>11</b>	Уплотнительное кольцо
<b>6</b>	Основной корпус		

### Описание элементов управления (рис. 3)

<b>10</b>	Автоматические программы	<b>17</b>	Кнопка уменьшения значения
<b>13</b>	Кнопка индикации подогрева и его отключения	<b>18</b>	Кнопка выбора температуры
<b>14</b>	Кнопка меню	<b>19</b>	Кнопка отсрочки старта
<b>15</b>	Кнопка выбора времени приготовления	<b>20</b>	Кнопка включения/отмены
<b>16</b>	Кнопка увеличения значения	<b>21</b>	Дисплей

### Обзор функций

Функции	Время пригото-вления по умолчанию	Регулир-уемая время пригото-вления	Время отсрочки старта	Температура пригото-вления по умолчанию
Рис/крупы	40 мин.	/	1—24 ч.	130—140 °С
Каша	10 мин.	5 мин.— 2 ч.	1—24 ч.	90—100 °С
Плов	35 мин.	/	1—24 ч.	130—140 °С
Йогурт	8 ч.	6—12 ч.	1—24 ч.	40±3 °С
Суп	1 час	20 мин.— 4 ч.	1—24 ч.	100 °С
Напитки	10 мин.	5—40 мин.	1—24 ч.	100 °С
Холодец	6 ч	4—10 ч.	1—24 ч.	90—100 °С
Печь	45 мин.	20 мин.— 2 ч.	/	130 °С
Разогреть	25 мин.	5—60 мин.	/	85 °С
Тушить/ рагу	1 час	20 мин.— 10 ч.	1—24 ч.	90 °С
Варить/ на пару	20 мин.	5 мин.— 2 ч.	1—24 ч.	100 °С
Жарить	15 мин.	5—60 мин.	/	145—150 °С
Томить	5 ч	1—15 ч.	1—24 ч.	80 °С
Запекать	1 час.	/	1—24 ч.	130 °С
Мульти-повар	2 ч.	5 мин.— 10 ч.	1—24 ч.	100 °С

<b>≡</b> Примечание
<ul style="list-style-type: none"><li>Температуру можно настраивать для функции приготовления выпечки и ручных режимов. Для выпечки можно выбрать температуру от 40 °С до 160 °С, а для режима мультиповара — от 30 °С до 160 °С (с шагом 10 °С).</li> <li>После запуска процесса приготовления для отключения программы нажмите и удерживайте кнопку включения/выключения (<b>СТАРТ/ ВЫКЛ</b>) в течение 3 секунд. Мультиварка перейдет в режим ожидания.</li></ul>

## 4 Использование мультиварки

### Перед первым использованием

- Извлеките все принадлежности из внутренней чаши. Снимите с внутренней чаши упаковочные материалы.
- Тщательно очистите все детали мультиварки перед первым использованием (см. главу “Очистка и уход”).

<b>≡</b> Примечание
<ul style="list-style-type: none"><li>Перед использованием мультиварки убедитесь, что все части абсолютно сухие.</li></ul>

### Подготовка к работе

Перед использованием мультиварки выполните следующие действия.

- Измерьте количество крупы с помощью прилагаемого мерного стакана.
- Тщательно промойте крупу.
- Поместите предварительно промытый рис во внутреннюю чашу.
- Налейте воду до уровня, указанного на шкале во внутренней чаше, и равномерно распределите крупу.
- Откройте крышку, нажав соответствующую кнопку (рис. 4).
- Протрите насухо внешнюю поверхность внутренней чаши (рис. 5), установите чашу в мультиварку (рис. 6). Убедитесь,

что внутренняя чаша касается нагревательного элемента должным образом.

- Закройте крышку мультиварки (рис. 7), вставьте вилку в розетку электросети (рис. 8).

<b>≡</b> Примечание
<ul style="list-style-type: none"><li>Убедитесь, что внутренняя чаша касается нагревательного элемента должным образом.</li> <li>Подобрности о соотношении количества крупы и воды см. в рецепте.</li> <li>Уровень, отмеченный во внутренней чаше, является рекомендуемым. Объем воды можно изменять в соответствии с типом крупы и вашими предпочтениями.</li> <li>Убедитесь, что внешняя поверхность внутренней чаши является сухой и чистой, а на нагревательном элементе и магнитном переключателе отсутствуют загрязнения.</li></ul>

### Приготовление риса и круп

- Следуйте инструкциям в главе “Подготовка к работе”.
- С помощью кнопки меню (**МЕНЮ**) выберите функцию приготовления риса/круп (**рис/крупы**) (рис. 9).
- Нажмите и удерживайте кнопку включения (**СТАРТ/ВЫКЛ**) в течение 3 секунд для запуска процесса приготовления (рис. 10).
- По окончании приготовления прозвучит 4 звуковых сигнала, индикатор выбранной функции погаснет.
- Мультиварка автоматически перейдет в режим подогрева.
  - ↪ Загорится индикатор режима подогрева (**ПОДОГРЕВ**) (рис. 11).

<b>≡</b> Примечание
<ul style="list-style-type: none"><li>Если в вашем регионе в сети наблюдаются перепады напряжения, емкость мультиварки может перемещаться.</li> <li>По окончании приготовления сразу же перемешайте рис, чтобы разрыхлить его и выпарить лишнюю жидкость. Это позволит получить более рассычатый рис.</li> <li>В зависимости от условий приготовления нижний слой риса может стать зюпистым.</li></ul>

### Приготовление каши

- Следуйте шагам 1—7 в главе “Подготовка к работе”.

<b>≡</b> Примечание
<ul style="list-style-type: none"><li>Во избежание перелопачива мультиварки не превышайте максимальный уровень воды, указанный во внутренней чаше.</li></ul>

<b>✱</b> Совет
<ul style="list-style-type: none"><li>Помимо соблюдения указанного уровня воды, для приготовления каши можно также использовать рис и воду в пропорции 1:4.</li></ul>

- С помощью кнопки меню (**МЕНЮ**) выберите функцию приготовления каши (**каша**) (рис. 12).
  - ↪ Чтобы задать другое время приготовления, см. главу “Изменение времени и температуры приготовления”.
- Нажмите кнопку включения (**СТАРТ/ВЫКЛ**) в течение 3 секунд для запуска процесса приготовления (рис. 10).
- По окончании приготовления прозвучит 4 звуковых сигнала, индикатор выбранной функции погаснет.
- Мультиварка автоматически перейдет в режим подогрева.
  - ↪ Загорится индикатор режима подогрева (**ПОДОГРЕВ**) (рис. 11).

### Приготовление плова

- Положите ингредиенты во внутреннюю чашу.
- Следуйте шагам 6 и 7 в главе “Подготовка к работе”.
- С помощью кнопки меню (**МЕНЮ**) выберите функцию приготовления плова (**плов**) (рис. 13).
  - ↪ Чтобы задать другое время приготовления, см. главу “Изменение времени и температуры приготовления”.
- Нажмите и удерживайте кнопку включения (**СТАРТ/ВЫКЛ**) в течение 3 секунд для запуска процесса приготовления (рис. 10).
- По окончании приготовления прозвучит 4 звуковых сигнала, индикатор выбранной функции погаснет.
- Мультиварка автоматически перейдет в режим подогрева.
  - ↪ Загорится индикатор режима подогрева (**ПОДОГРЕВ**) (рис. 11).

### Приготовление йогурта

- Хорошо перемешайте ингредиенты для йогурта и положите их в стеклянный контейнер (рис. 14).
- Стеклянный контейнер поставьте во внутреннюю чашу (рис. 15). Контейнер должен быть плотно закрыт.
- Налейте воду во внутреннюю чашу. Контейнер должен быть погружен в воду наполовину.
- Следуйте шагам 6 и 7 в главе “Подготовка к работе”.
- С помощью кнопки меню (**МЕНЮ**) выберите функцию приготовления йогурта (**йогурт**) (рис. 16).
  - ↪ Чтобы задать другое время приготовления, см. главу “Изменение времени и температуры приготовления”.
- Нажмите и удерживайте кнопку включения (**СТАРТ/ВЫКЛ**) в течение 3 секунд для запуска процесса приготовления (рис. 10).
- По окончании приготовления прозвучит 4 звуковых сигнала, индикатор выбранной функции погаснет.
  - ↪ Мультиварка автоматически перейдет в режим ожидания.

### Приготовление супа

- Положите ингредиенты и налейте воду во внутреннюю чашу.
- Следуйте шагам 6 и 7 в главе “Подготовка к работе”.
- С помощью кнопки меню (**МЕНЮ**) выберите функцию приготовления супа (**суп**) (рис. 17).
  - ↪ Чтобы задать другое время приготовления, см. главу “Изменение времени и температуры приготовления”.
- Нажмите кнопку включения (**СТАРТ/ВЫКЛ**) в течение 3 секунд для запуска процесса приготовления (рис. 10).
- По окончании приготовления прозвучит несколько звуковых сигналов, индикатор выбранной функции погаснет.
- Мультиварка автоматически перейдет в режим подогрева.

- ↪ Загорится индикатор режима подогрева (**ПОДОГРЕВ**) (рис. 11).

### Приготовление напитков

- Положите ингредиенты и налейте воду во внутреннюю чашу.
- Следуйте шагам 6 и 7 в главе “Подготовка к работе”.
- С помощью кнопки меню (**МЕНЮ**) выберите функцию приготовления напитков (**напиток**) (рис. 18).
  - ↪ Чтобы задать другое время приготовления, см. главу “Изменение времени и температуры приготовления”.
- Нажмите кнопку включения (**СТАРТ/ВЫКЛ**) в течение 3 секунд для запуска процесса приготовления (рис. 10).
- По окончании приготовления прозвучит несколько звуковых сигналов, индикатор выбранной функции погаснет.
- Мультиварка автоматически перейдет в режим подогрева.
  - ↪ Загорится индикатор режима подогрева (**ПОДОГРЕВ**) (рис. 11).

### Холодец и приготовление на медленном огне

- Положите ингредиенты во внутреннюю чашу.
- Следуйте шагам 6 и 7 в главе “Подготовка к работе”.
- С помощью кнопки (**МЕНЮ**) выберите режим приготовления холодца (холодец) или приготовления на медленном огне (**томить**) (рис. 19).
  - ↪ Чтобы задать другое время приготовления, см. главу “Изменение времени и температуры приготовления”.
- Нажмите и удерживайте кнопку включения (**СТАРТ/ВЫКЛ**) в течение 3 секунд для запуска процесса приготовления (рис. 10).
- По окончании приготовления прозвучит несколько звуковых сигналов, индикатор выбранной функции погаснет.
- Мультиварка автоматически перейдет в режим подогрева.
  - ↪ Загорится индикатор режима подогрева (**ПОДОГРЕВ**) (рис. 11).

### Выпечка

- Положите ингредиенты во внутреннюю чашу.
- Следуйте инструкциям в шаге 6 главы “Подготовка к работе”.
- Подключите сетевую вилку к электророзетке.

<b>≡</b> Примечание
<ul style="list-style-type: none"><li>При выпечке тортов крышка должна быть закрыта. Оптимальной для выпечки считается температура 130 °С в время приготовления 45 минут.</li> <li>Во время приготовления рекомендуется открывать крышку, если температура превышает 130 °С.</li></ul>

- С помощью кнопки меню (**МЕНЮ**) выберите функцию выпечки (**печь**) (рис. 20).
  - ↪ Чтобы задать другое время и температуру, см. главу “Изменение времени и температуры приготовления”.
- Нажмите и удерживайте кнопку включения (**СТАРТ/ВЫКЛ**) в течение 3 секунд для запуска процесса приготовления (рис. 10).
- По окончании выпекания прозвучат 4 звуковых сигнала, а индикатор выбранной функции погаснет.
- Мультиварка автоматически перейдет в режим подогрева.
  - ↪ Загорится индикатор режима подогрева (**ПОДОГРЕВ**) (рис. 11).

<b>≡</b> Примечание
<ul style="list-style-type: none"><li>Извлекая внутреннюю чашу из мультиварки, пользуйтесь кухонными рукавицами или прихватками — чаша сильно нагревается.</li></ul>

### Разогрев

- Помешайте оставшее блюдо и равномерно распределите ингредиенты во внутреннюю чашу (рис. 21).
- С помощью кнопки меню (**МЕНЮ**) выберите функцию разогрева (**разогреть**) (рис. 23).
- ↪ Чтобы задать другое время приготовления, см. главу “Изменение времени и температуры приготовления”.
- Нажмите и удерживайте кнопку включения (**СТАРТ/ВЫКЛ**) в течение 3 секунд для запуска процесса приготовления (рис. 10).
- По окончании приготовления прозвучит 4 звуковых сигнала, индикатор выбранной функции погаснет.
- Мультиварка автоматически перейдет в режим подогрева.
  - ↪ Загорится индикатор режима подогрева (**ПОДОГРЕВ**) (рис. 11).

### Тушение/приготовление рагу

- Положите ингредиенты во внутреннюю чашу.
- Следуйте шагам 6 и 7 в главе “Подготовка к работе”.
- С помощью кнопки меню (**МЕНЮ**) выберите функцию тушения (**тушить/рагу**) (рис. 24).
  - ↪ Чтобы задать другое время приготовления, см. главу “Изменение времени и температуры приготовления”.
- Нажмите и удерживайте кнопку включения (**СТАРТ/ВЫКЛ**) в течение 3 секунд для запуска процесса приготовления (рис. 10).
- По окончании приготовления прозвучит несколько звуковых сигналов, индикатор выбранной функции погаснет.
- Мультиварка автоматически перейдет в режим подогрева.
  - ↪ Загорится индикатор режима подогрева (**ПОДОГРЕВ**) (рис. 11).

### Пароварка

- Налейте воду во внутреннюю чашу.
- Поставьте поддон пароварки во внутреннюю чашу (рис. 25).

- Поместите продукты для приготовления на пару на тарелку или в поддон пароварки.
- При использовании отдельной тарелки поместите ее в поддон пароварки (рис. 26).
- Следуйте шагам 6 и 7 в главе “Подготовка к работе”.
- С помощью кнопки меню (**МЕНЮ**) выберите функцию приготовления на пару (**варить/на пару**) (рис. 27).
  - ↪ Чтобы задать другое время приготовления, см. главу “Изменение времени и температуры приготовления”.
- Нажмите и удерживайте кнопку включения (**СТАРТ/ВЫКЛ**) в течение 3 секунд для запуска процесса приготовления (рис. 10).
- По окончании приготовления прозвучит 4 звуковых сигнала, индикатор выбранной функции погаснет.
- Мультиварка автоматически перейдет в режим подогрева.
  - ↪ Загорится индикатор режима подогрева (**ПОДОГРЕВ**) (рис. 11).
- Откройте крышку и аккуратно извлеките продукты из тарелки или паровой корзины.

<b>≡</b> Примечание
<ul style="list-style-type: none"><li>Количество воды зависит от количества продуктов в лотке для приготовления на пару. Не погружайте лоток для приготовления на пару в воду.</li> <li>Используйте кухонную прихватку или ткань, так как тарелка и поддон очень горячие.</li></ul>

### Кипячение

- Положите ингредиенты во внутреннюю чашу.
- Следуйте шагам 6 и 7 в главе “Подготовка к работе”.
- С помощью кнопки меню (**МЕНЮ**) выберите функцию варки (**варить/на пару**) (рис. 27).
  - ↪ Чтобы задать другое время приготовления, см. главу “Изменение времени и температуры приготовления”.
- Нажмите кнопку включения (**СТАРТ/ВЫКЛ**) для запуска процесса приготовления (рис. 10).
- По окончании приготовления прозвучит несколько звуковых сигналов, индикатор выбранной функции погаснет.
- Мультиварка автоматически перейдет в режим подогрева.
  - ↪ Загорится индикатор режима подогрева (**ПОДОГРЕВ**) (рис. 11).

### Жарка

- Положите ингредиенты во внутреннюю чашу.
- Следуйте инструкциям в шаге 6 главы “Подготовка к работе”.
- Подключите сетевую вилку к электророзетке.
- С помощью кнопки меню (**МЕНЮ**) выберите функцию жарки (**жарить**) (рис. 28).
  - ↪ Чтобы задать другое время приготовления, см. главу “Изменение времени и температуры приготовления”.
- Нажмите и удерживайте кнопку включения (**СТАРТ/ВЫКЛ**) в течение 3 секунд для запуска процесса приготовления (рис. 10).
- По окончании приготовления прозвучит 4 звуковых сигнала, индикатор выбранной функции погаснет.
- Мультиварка автоматически перейдет в режим подогрева.
  - ↪ Загорится индикатор режима подогрева (**ПОДОГРЕВ**) (рис. 11).

<b>≡</b> Примечание
<ul style="list-style-type: none"><li>В режиме жарки (<b>жарить</b>) не накрывайте прибор верхней крышкой.</li></ul>

### Обжарка

- Положите ингредиенты во внутреннюю чашу.
- Следуйте инструкциям в шаге 6 главы “Подготовка к работе”.
- Подключите сетевую вилку к электророзетке.
- С помощью кнопки меню (**МЕНЮ**) выберите функцию запекания (**Запекать**) (рис. 29).
  - ↪ Чтобы задать другое время приготовления, см. главу “Изменение времени приготовления”.
- Нажмите и удерживайте кнопку включения (**СТАРТ/ВЫКЛ**) в течение 3 секунд для запуска процесса приготовления (рис. 10).
- Процесс запекания включает 2 этапа. Первый этап длится примерно 35 минут, после чего прозвучит 5 звуковых сигналов, означающих, что блюдо пора перевернуть.
- Чтобы начать второй этап, нажмите кнопку меню (**МЕНЮ**). Если после 5 звуковых сигналов никаких действий не последует, мультиварка перейдет в режим подогрева до окончания времени приготовления.

### Ручной

Для настройки температуры и времени приготовления можно воспользоваться ручным режимом.

- Положите ингредиенты во внутреннюю чашу.
- Выполните шаги 6 и 7 в главе “Подготовка к работе”. С помощью кнопки меню (**МЕНЮ**) выберите функцию ручного режима (**мультиповар**) (рис. 30).
  - ↪ Чтобы задать другое время и температуру, см. главу “Изменение времени и температуры приготовления”.
- Нажмите и удерживайте кнопку включения (**СТАРТ/ВЫКЛ**) в течение 3 секунд для запуска процесса приготовления (рис. 10).
- По окончании приготовления прозвучит 4 звуковых сигнала, индикатор выбранной функции погаснет.
- Мультиварка автоматически перейдет в режим подогрева.
  - ↪ Загорится индикатор режима подогрева (**ПОДОГРЕВ**) (рис. 11).

<b>≡</b> Примечание
<ul style="list-style-type: none"><li>Во время приготовления еды при температуре ниже 70 °С следует выключать режим подогрева перед началом приготовления.</li> <li>В ручном режиме (<b>мультиповар</b>) при выборе температуры выше 130 °С верхняя крышка во время приготовления должна быть открыта.</li></ul>

## Режим подогрева

В мультиварке предусмотрена функция удобного управления режимом подогрева.

- Если после выбора функции приготовления с помощью кнопки меню (**МЕНЮ**) нажать и удерживать кнопку включения (**СТАРТ/ВЫКЛ**) 3 секунды, загорится индикатор режима подогрева. После окончания приготовления мультиварка перейдет в режим подогрева.
- Если после выбора функции приготовления с помощью кнопки меню (**МЕНЮ**) сначала нажать кнопку режима подогрева, а затем удерживать кнопку включения (**СТАРТ/ВЫКЛ**) 3 секунды, индикатор режима подогрева не загорится. По окончании приготовления мультиварка перейдет в режим ожидания.

<b>≡</b> Примечание
<ul style="list-style-type: none"><li>Для перехода в режим подогрева из режима ожидания нажмите кнопку режима подогрева (<b>ПОДОГРЕВ</b>).</li> <li>Для перехода в режим ожидания из режима подогрева нажмите кнопку режима подогрева (<b>ПОДОГРЕВ</b>).</li></ul>

### Изменение времени и температуры приготовления

Время приготовления можно изменить для всех режимов, кроме режима приготовления плова, риса/круп, запекания. Температуру приготовления можно изменить для режима выпекания и ручных режимов. Допустимые значения времени и температуры см. в таблице “Обзор функций”.

После выбора функции приготовления с помощью кнопки меню на дисплее отобразится заданное по умолчанию время.

- Чтобы выбрать другое время приготовления, нажмите кнопку выбора времени приготовления (**ВРЕМЯ ПРИГОТОВЛЕНИЯ**) (рис. 31). На дисплее начнет мигать индикатора времени приготовления, установленного по умолчанию.
- С помощью кнопки увеличения (+) или уменьшения (-) выберите значение часа (рис. 32).
- Здав значение часа, подождите несколько секунд — значение будет подтверждено, затем начнет мигать значение минут.
- С помощью кнопки увеличения (+) или уменьшения (-) выберите значение минут.
- Чтобы установить другую температуру приготовления, нажмите кнопку нагрева (**ТЕМП.**) (рис. 33). На дисплее начнет мигать индикатора значения температуры, установленного по умолчанию.
- С помощью кнопки увеличения (+) или уменьшения значения (-) выберите температуру приготовления (рис. 34).